

Touch Screen (If Equipped)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc.

► With navigation system



► Without navigation system



- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "SETUP": Setup screen
- 4 "DISP": Adjust picture quality
- 5 "MAP/VOICE": Vehicle's current position
- 6 "DEST": Destination screen
- 7 "INFO/PHONE": Information screen

n Set up screen


Press “SETUP” to display the “Setup” screen.

► With navigation system




- 1 “General”: General settings screen
- 2 “Clock”: Clock settings screen
- 3 “Voice”: Voice settings screen
- 4 “Navi.”: Navigation settings screen
- 5 “Other”: Other settings screen
- 6 “Vehicle”: Vehicle settings screen
- 7 “Audio”: Audio settings screen
- 8 “Phone”: Phone settings screen


► Without navigation system

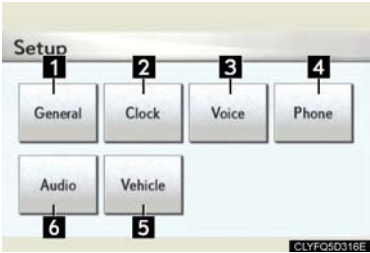

- 1 “General”: General settings screen
- 2 “Clock”: Clock settings screen
- 3 “Voice”: Voice settings screen
- 4 “Phone”: Phone settings screen
- 5 “Vehicle”: Vehicle settings screen
- 6 “Audio”: Audio settings screen

n Display

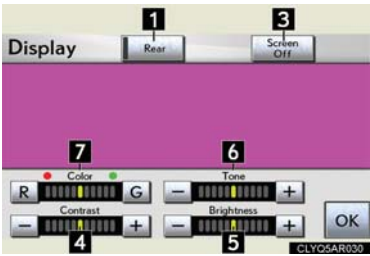

Push the  button on the side of the touch screen to show the “Display” screen.

- 1 Turns the rear seat entertainment system on and off
- 2 Displays the screen in “Day Mode” with the headlight switch on
- 3 Turns the screen off
- 4 Adjust contrast
- 5 Adjust brightness
- 6 Adjust color tone
- 7 Adjust color

n Screen scroll operation (with navigation system)



When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

n Setting a route (with navigation system)

While route guidance is operating, you can change the route using the following method.



Touch **Route**.
The following settings can be accessed




- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".


Navigation System (If Equipped)

n Register home


► With navigation system

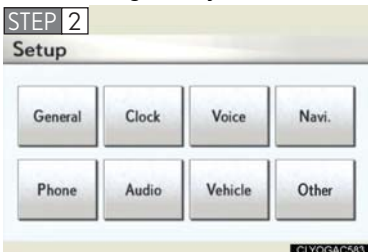

 1 Push the  button on the side of the touch screen. (→P.39)

2 Touch .


► Without navigation system

 
 
 
 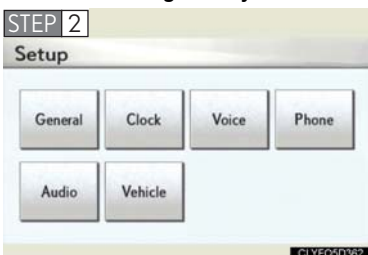

 


3 Touch .

4 Touch .

5 Touch .

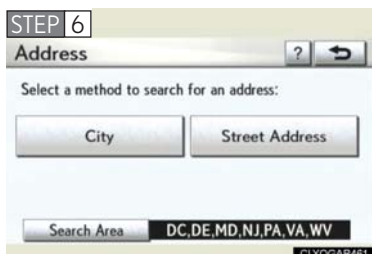

- 6 Touch .
- 7 Input a city name and touch .
- 8 Touch the button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 9 Input the street name and touch .
- 10 When the desired street name is found, touch the corresponding button.
- 11 Input a house number and touch .
- 12 Touch .
- 13 Touch .


n Destination input——Search by address

► Select by city name



- 1 Push the  button on the side of the touch screen. (→P.39)

- 2 Touch .

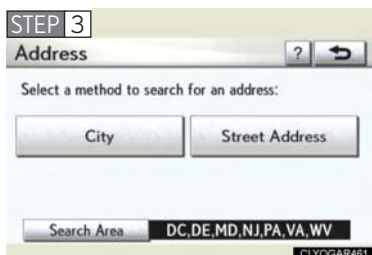

- 3 Touch .




- 4 Input a city name and touch **OK**.
- 5 Touch the button of the desired city name from the displayed list.
- 6 Input the street name and touch **OK**.
- 7 When the desired street name is found, touch the corresponding button.
- 8 Input a house number and touch **OK**.
- 9 Touch **Go to**.
- 10 Touch **OK**.

► Select by street address




- 1 Push the **DEST** button on the side of the touch screen. (→P.39)

- 2 Touch **Address**.

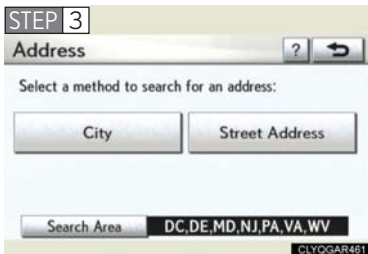

- 3 Touch **Street Address**.

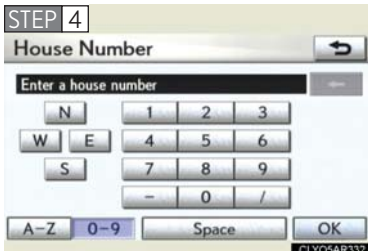

- 4 Input a house number and touch **OK**.
- 5 Input the street name and touch **OK**.
- 6 When the desired street name is found, touch the corresponding button.
- 7 Input a city name and touch **OK**.
- 8 Touch the button of the desired city name from the displayed list.
- 9 Touch **Go to**.
- 10 Touch **OK**.


n Destination input——Search points of interest by name

 


1 Push the  button on the side of the touch screen. (→P.39)

2 Touch .

3 Touch .

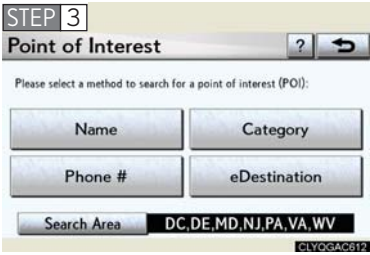

4 Input the name of the point of interest and touch .


5 Touch the button of the desired destination.

6 Touch .

7 Touch .




n Destination input—— Search points of interest by category

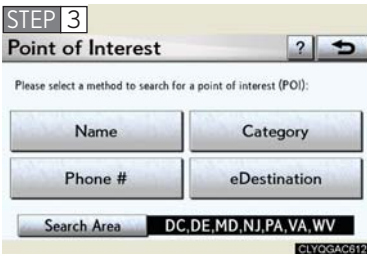

1 Push the  button on the side of the touch screen. (→P.39)

2 Touch .

3 Touch .

4 Touch .

5 Touch the button of the desired destination and set the search point.



6 Touch the desired point of interest category.

7 Touch the button of the desired item.

8 Touch .

9 Touch .


n Destination input—— Search points of interest by telephone number

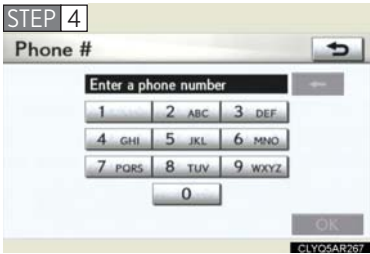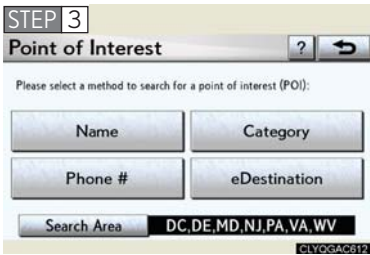

1 Push the  button on the side of the touch screen. (→P.39)

2 Touch .

 3 Touch .

4 Input a telephone number and touch .

5 Touch .


6 Touch .

Hands-free System For Cellular Phone (If equipped)



n Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

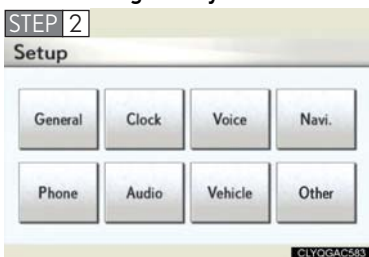

► With navigation system

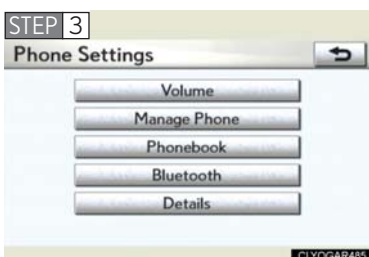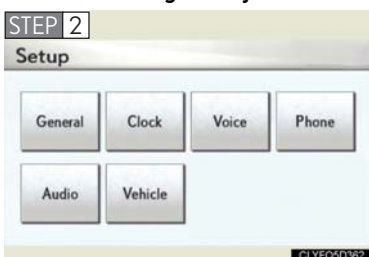

► Without navigation system




To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Push the  or  button on the side of the touch screen. (→P.39)

2 Touch .

3 Touch .

4 Touch  to display the screen for connecting Bluetooth.



- 5 Enter the passcode displayed on the screen into the phone.


Refer to the cellular phone user's manual for cellular phone operation.



- 6 When the connection is completed, **Bluetooth connection successful.** will appear

and push the  or  button.

n Phonebook transfer

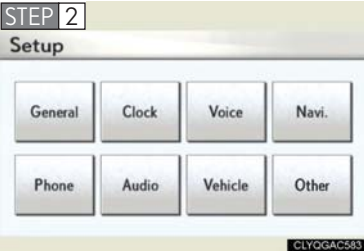
► With navigation system



1 Push the  or  button on the side of the touch screen. (→P.39)

2 Touch .

► Without navigation system

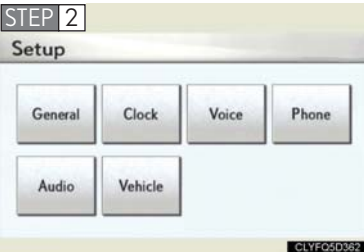

3 Touch .



4 Touch .

5 Touch .

6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.



Phonebook transfer may not be possible depending on phone model.

n Registering a voice tag



► With navigation system

STEP 2

Setup



CLYOGAC583

1 Push the  or  button on the side of the touch screen. (→P.39)

2 Touch .

► Without navigation system

STEP 2

Setup



CLYFOS0362

3 Touch .

STEP 3

Phone Settings




CLYOGAR485

4 Touch .

STEP 4


Phonebook Settings

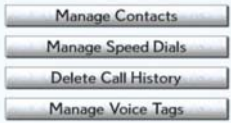

CLYOGAR263

5 Touch .


6 Touch the data you want to register.



7 Touch , and record a voice tag.


8 Touch .

n Registering a speed dial


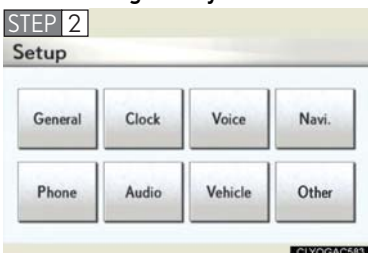
► With navigation system



1 Push the  or  button on the side of the touch screen. (→P.39)

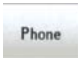2 Touch .

► Without navigation system

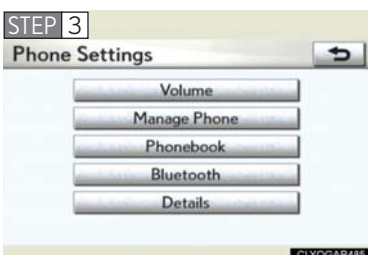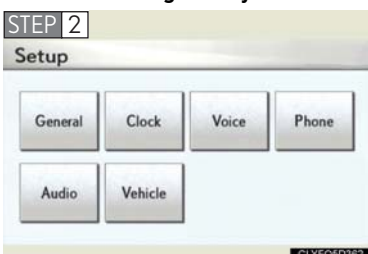

3 Touch .

4 Touch .

5 Touch .



6 Touch the data you want to register.


7 Touch the desired phone number.



8 Touch the button you want to register in.



9 The registration completion message is displayed on the screen.

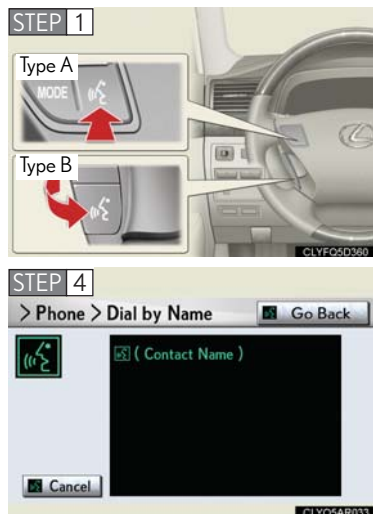n Calling by name


You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



- 1 Press  or pull .
- 2 Follow the voice guidance and say "Phone".
(with navigation system)
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".

Pressing  or pulling  switch turns the speech command system on. Say a command after the beep.

n Calling by speed dial

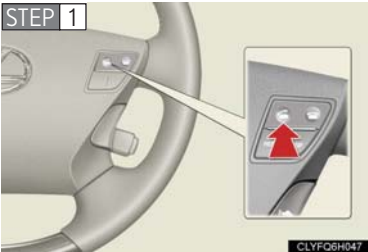

1 Press .





2 Touch .




3 Touch the desired number to call.

n Receiving a call

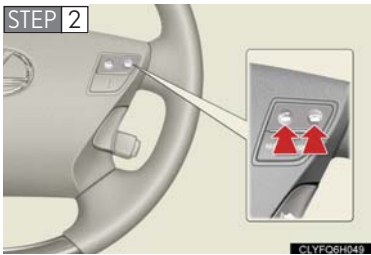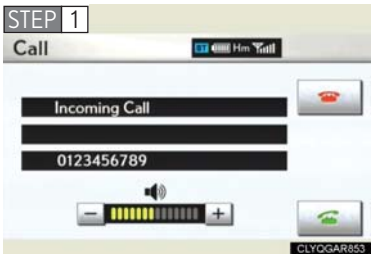

1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

Audio System (without navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

n Basic operation

► Without touch screen



- 1 Power/Volume
- 2 Sound quality modes
- 3 Listening position
- 4 Automatic Sound Levelizer ("ASL")
- 5 Audio sources
 - "AM": AM radio
 - "FM": FM radio
 - "CD-AUX": CD player/Auxiliary audio device

► With touch screen




- 1 Display the audio control screen
- 2 Sound quality modes
- 3 Audio sources
 - "AM-FM": AM radio /FM radio (Type A)
 - "SAT": Satellite radio (Type A)
 - "AM": AM radio (Type B)
 - "FM": FM radio (Type B)
 - "DISC": DVD player (if equipped)
 - "CD": CD player (if equipped)
 - "AUX-USB": Auxiliary audio device/Bluetooth® audio/iPod/USB memory
- 4 Power/Volume



n Radio

► Without touch screen

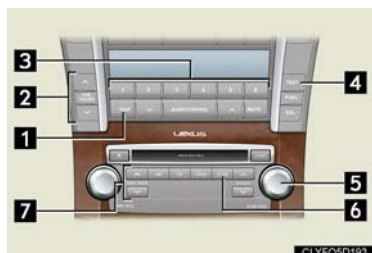

1 Traffic information

2 RDS genre select

3 Station presets

4 Text messages

5 Radio tuner

6 Scan

All radio stations: press

Preset radio stations: press and hold

7 Seek

n Entering station presets

1 Select the desired station by using the tuner, the seek or the scan function.

2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

► With touch screen



1 Display the audio control screen

2 Station presets

3 Scan

All radio stations: press

Preset radio stations: press and hold

4 Traffic information

5 Radio tuner

6 Station select

7 Seek

8 RDS genre select

n Entering station presets

1 Select the desired station by using the tuner, the seek or the scan function.

2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

n CD player

n Playing an audio CD

► Without touch screen



- 1 Random playback
Current CD: press
All CDs: press and hold
- 2 Repeat
Current track: press
Current CD: press and hold
- 3 Text information
- 4 CD load
- 5 CD select
- 6 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 7 Track select/rewind/fast-forward
- 8 Eject


► With touch screen



- 1 Display the audio control screen
- 2 Display track list
- 3 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 4 Random playback
Current CD: press
All CDs: press and hold
- 5 Repeat
Current track: press
Current CD: press and hold
- 6 CD load
- 7 CD select
- 8 Track select/rewind/fast-forward
- 9 Eject
- 10 Display disc list

n Playing a CD with MP3/WMA files

► Without touch screen

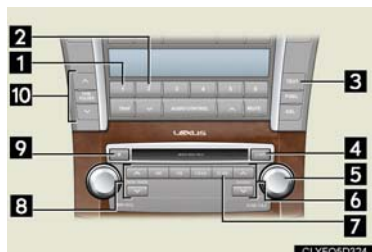

- 1** Random playback
Current file: press
All files in current folder: press and hold
- 2** Repeat
Current file: press
All files in current folder: press and hold
- 3** Text information
- 4** CD load
- 5** File select
- 6** CD select
- 7** Scan
All files in current folder: press
First file of each folder: press and hold
- 8** File select/rewind/fast-forward
- 9** Eject
- 10** Folder select

► With touch screen



- 1** Display the audio control screen
- 2** Display file list
- 3** Folder select
- 4** Display folder list
- 5** Scan
All files in current folder: press
First file of each folder: press and hold
- 6** Random playback
Current folder: press
All folders: press and hold
- 7** CD load
- 8** File select
- 9** CD select
- 10** File select/rewind/fast-forward
- 11** Eject
- 12** Repeat
Current file: press
All files in current folder: press and hold
- 13** Display disc list

n Loading a CD

► Without touch screen

- [1]** Press the "LOAD" button.
"WAIT" is shown on the display.
- [2]** Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".

► With touch screen

- [1]** Press the "LOAD" button.
- [2]** When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.

n Loading multiple CDs

► Without touch screen

- [1]** Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- [2]** Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the disc slot door turn to amber when the CD is inserted.
- [3]** Insert the next CD when the indicators on the disc slot door turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the "CD·AUX" button.

► With touch screen

- [1]** Press and hold the "LOAD" button until you hear a beep.
- [2]** When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.
- [3]** After inserting a CD, wait until the indicator changes from flashing amber to green, then insert the next CD after the disc slot door has opened.

Repeat **[2]** and **[3]** until you have inserted all CDs.

To cancel the operation, press the "LOAD", "DISC" or "CD" button. If you do not insert a CD within 15 seconds, loading will be canceled automatically.


n Operating an iPod



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Song list
- 7 Song select
- 8 Song select/rewind/fast-forward

n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

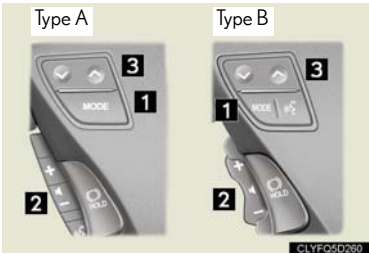

- 1 Power on/change mode: press
Power off: press and hold
- 2 Volume
- 3 Radio: station select
Audio CD, Video CD, DVD audio, Bluetooth[®] audio (If equipped) or iPod: track select
DVD video: chapter select
MP3 CD, WMA CD or USB memory: file select

n Rear seat audio controls (if equipped)


Some front audio features can be controlled from the rear seats.

► 5-seat models



- 1 Volume
- 2 Power
- 3 Disc select
- 4 Radio: station select
Audio CD, Video CD, DVD audio, Bluetooth[®] audio or iPod: track select
DVD video: chapter select
MP3 CD, WMA CD or USB memory: file select

► 4-seat models

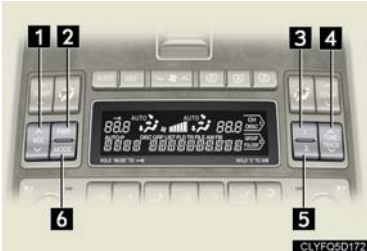

- 5 Folder/album select
- 6 Audio sources

Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

n Basic operation



1 Displays the audio control screen

2 Sound quality modes

3 Audio sources

► Type A

AM•FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD player

AUX•USB: Auxiliary audio device/USB
memory/iPod/Bluetooth®
audio player

► Type B

AM: AM radio

FM: FM radio

DISC: DVD player

AUX•USB: Auxiliary audio device/USB
memory/iPod/Bluetooth®
audio player

4 Power/Volume

n Radio



1 Displays the audio control screen

2 Station presets

3 Scanning radio stations

4 Radio tuner

5 Station select

6 Seek

n Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

n DVD player/CD player

n Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Track select/rewind/fast-forward
- 8 Eject

n Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

n Playing a DVD (DVD player only)



- 1** Displays the audio control screen
- 2** Disc select
- 3** DVD operation
- 4** Image display (full screen)
- 5** Disc load
- 6** Chapter select/rewind/fast-forward
- 7** Eject

n Loading a disc

- 1** Press the “LOAD” button.
- 2** When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

n Loading multiple discs

- 1** Press and hold the “LOAD” button until you hear a beep.
- 2** When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3** After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat **2** and **3** until you have inserted all discs.

To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

n Operating an iPod



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Song list
- 7 Song select
- 8 Song select/rewind/fast-forward

n Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

► Type A




- 1 Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select
- 2 Power on/change mode: press
Power off: press and hold
- 3 Volume

► Type B



Front Air Conditioning System (without touch screen)

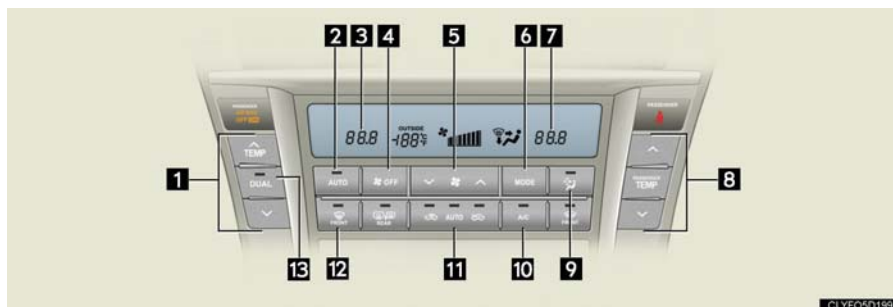

CLYF05D199

- | | |
|--------------------------------------|---|
| 1 Driver side temperature control | 8 Passenger side temperature control |
| 2 Automatic mode button | 9 Micro dust and pollen filter button |
| 3 Driver side temperature display | 10 "A/C" button |
| 4 "OFF" button | 11 Outside air/recirculated air mode button |
| 5 Fan speed controls | 12 Windshield defog/defrost |
| 6 Air flow controls | 13 Dual mode button |
| 7 Passenger side temperature display | |

n Using the automatic mode



- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

CLYF05D200

n Adjusting the temperature in dual mode



In dual mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the "DUAL" button.
- 2 Adjust the driver side temperature using the "TEMP" buttons, and the passenger side temperature using the "PASSENGER TEMP" buttons.

n To turn off the airflow

Press "OFF".

Front Air Conditioning System (with touch screen)

► Without rear air conditioning system



► With rear air conditioning system



- | | |
|---|---|
| 1 "CLIMATE" (air conditioning operation screen display button) | 10 Driver side temperature display |
| 2 Air flow display | 11 Automatic mode button |
| 3 Fan speed display | 12 Dual mode button |
| 4 Passenger side temperature control | 13 Driver side temperature control |
| 5 Outside air/recirculated air mode button | 14 "A/C" button |
| 6 Passenger side temperature display | 15 Rear air conditioning operation screen display switch |
| 7 Micro dust and pollen filter button | 16 Air purifier and rear air conditioning operation switch |
| 8 Windshield defog/defrost | 17 Individual mode button |
| 9 "OFF" button | |

n Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

n Adjusting the temperature in dual mode (without rear air conditioning system)

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To cancel the dual mode, press the "DUAL" button.

n Adjusting the temperature in individual mode (with rear air conditioning system)

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To adjust the temperature for the rear seats, see page 72.
To cancel the individual mode, press the "4-ZONE" button.

n To turn off the airflow


Press "OFF".

Rear Air Conditioning System (If Equipped)

► 5-seat models



► 4-seat models

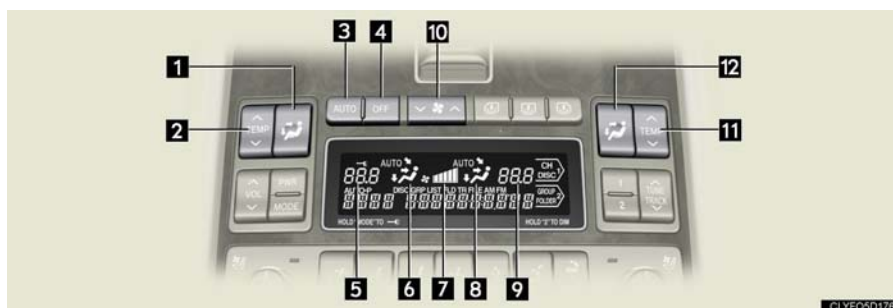

1 Changes the left side air outlet used

2 Left side temperature control

3 Automatic mode button

4 "OFF" button

5 Left side temperature display

6 Left side air flow display

7 Air volume display

8 Right side air flow display


9 Right side temperature display

10 Air volume controls

11 Right side temperature control

12 Changes the right side air outlet used

n Front controller (touch screen)

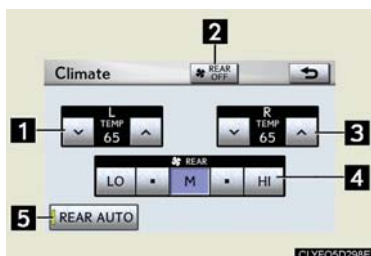

1 Left side temperature control switch and display

2 Off

3 Right side temperature control switch and display

4 Fan speed display

5 Automatic mode button


Heated Steering Wheel (If Equipped)



To heat the leather portion of the steering wheel, press the button.


Press again to cancel.

Rear Sunshade/Rear Door Sunshades (If Equipped)

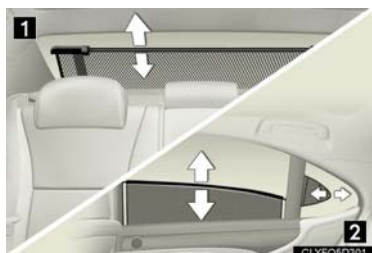


- 1 Rear sunshade
- 2 Rear door sunshades

n Raising/Extending from the front seat

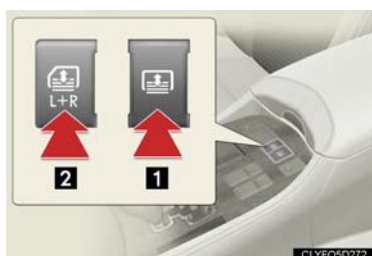

► Without rear console display


- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.

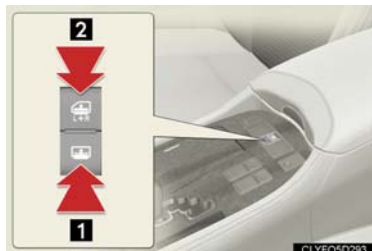

► With rear console display

- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.

n Raising/Extending from the rear seat

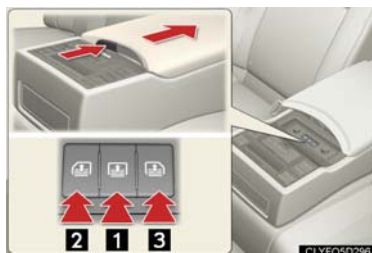


► 5-seat models

Slide the armrest lid

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

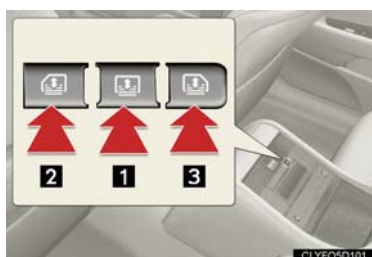

► 4-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Compass (If Equipped)



To display the compass, press and hold the "AUTO" button for 3 or more seconds.

To cancel the display, press and hold the "AUTO" button again for 3 or more seconds.

Trunk Storage Extension (If Equipped)

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Unlock the armrest door using the mechanical key.

► Opening from the cabin



► Opening from the trunk




- 3 Open the inside trunk door from the cabin or trunk, and load baggage or other items.

Voice Command System (If Equipped)



n Basic operation

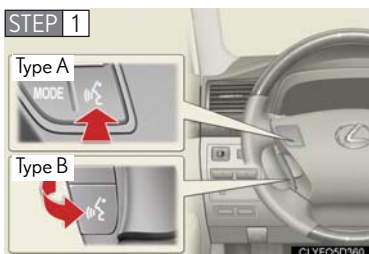NOTE: When inputting voice commands you must wait until after the beep to speak.





1 Press  or pull .

2 - If you know the command:




Press  or pull  again.

- If you do not know the command:

Follow the voice guidance to learn the command and then press  or pull  again.

3 Say a command after the beep.

n Important voice commands information and tips


- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- A large TALK icon  will appear on the touch screen to prompt you to say a command.
- If you know what command to use, you can press  or pull  at any time to interrupt the voice guidance.

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

n System components

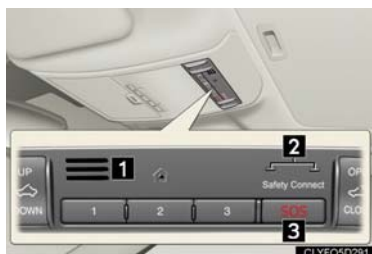

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

n Services

Subscribers have the following Safety Connect services available:

1 Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

1 Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

1 Emergency Assistance Button (SOS)

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

1 Enhanced Roadside Assistance

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

n Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

n Services

► **With an active Lexus Enform subscription, the following features are available:**

1 Safety Connect features (→P.78)

- Automatic collision notification^{*1}
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

1 Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

1 eDestination

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

1 XM[®] Sports and Stocks^{*2}

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

1 XM NavWeather™*3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

1 XM® NavTraffic*3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

► **The following navigation-based Lexus Enform features are available without a subscription:**

1 Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

1 Voice Command

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

n Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.